



STRAIGHT CONNECTOR CONECTOR RECTO

Joins two sections of track end to end.


For use with Hampton Bay series track system. 60Hz 120V

INSTALLATION INSTRUCTIONS:

1. Before installing, disconnect power by turning off circuit breaker or by removing fuse at fuse box.
2. **IMPORTANT:** Determine ground side of track (has indented groove on face and two internal copper bars) and connector (side of connector with two metal tabs). Can only be assembled if grounds are aligned.
3. Loosen set screw on dead end cap at appropriate track end and remove. Loosen set screws on connector.
4. Aligning the ground sides of the track and connector, push the connector into open ends of track.
5. Tighten set screws.

INSTALLATION INSTRUCTIONS:

1. Antes de comenzar la instalación, desconecte la electricidad desactivando el disyuntor o quitando el fusible de la caja de fusibles.
2. **IMPORTANTE:** Determine cuál es el lado a tierra del riel (tiene una ranura en el lado anterior y dos barras interiores de cobre) y del conector (el lado con dos lengüetas de metal). A pesar de no ser un accesorio con conexión a tierra, el mismo podrá ensamblarse únicamente si los lados a tierra están alineados.
3. Afloje el tornillo sujetador en la cubierta de extremo y quítelo. Afloje los tornillos sujetadores del conector.
4. Alinee los lados a tierra del conector y del riel y empuje el conector hacia los extremos abiertos del riel.
5. Apriete los tornillos sujetadores.

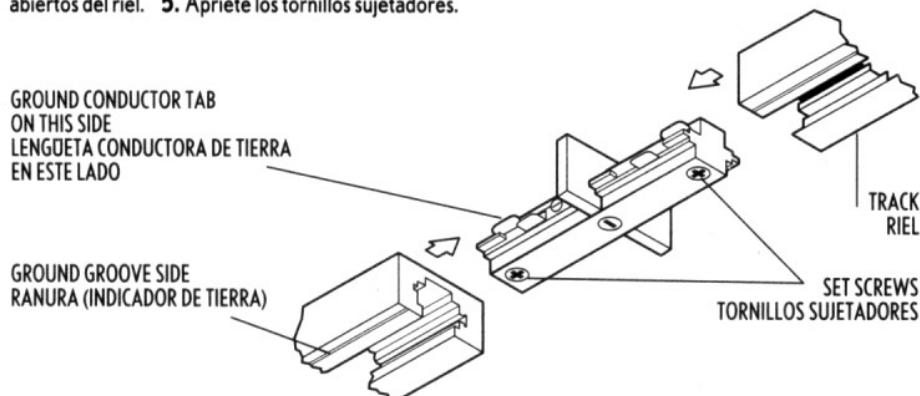

IT xxxx You xxx/02B